


# **SECTION F**

## **BANDSAW**

## BANDSAW

Square table to saw blade.

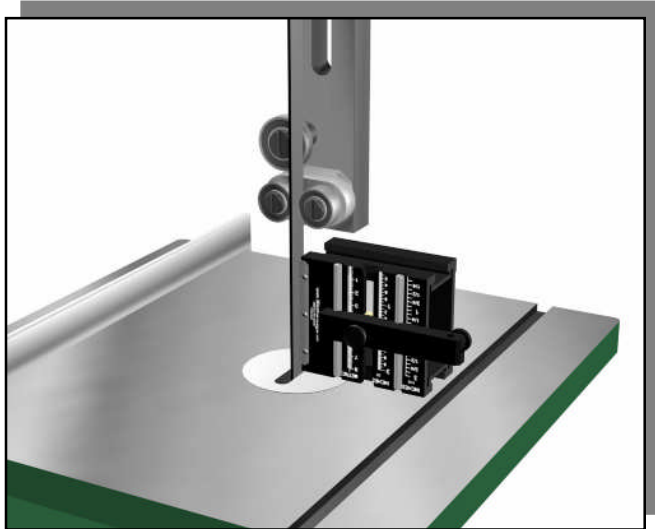

### ADDITIONAL USES ON THE BANDSAW

#### CHECKING THE WHEELS FOR CONCENTRICITY [ROUNDNESS]:

1. Remove the Level Arm (See Useful Tips and Techniques Section)
2. Mount the dial indicator in the horizontal position [stem in line with the Level Arm].
3. Mount [clamp] the Level Arm with dial indicator so that the tip of the dial indicator is facing - and in contact with the face of the wheel [top or bottom].
4. Mark the wheel at the start point and rotate the wheel by hand one complete turn back to the mark and note the reading variation.

#### CHECKING THE WHEELS FOR RUN OUT, OR SIDE MOTION

1. Duplicate notes 1 & 2 above.
2. Mount [clamp] the Level arm with dial indicator so that tip of the dial indicator is in contact with the side surface of the wheel [top or bottom].
3. Duplicate note 4 above.