


# **SECTION I**

**DISK SANDER**

**+**

**DRUM SANDER**


## DISC SANDER

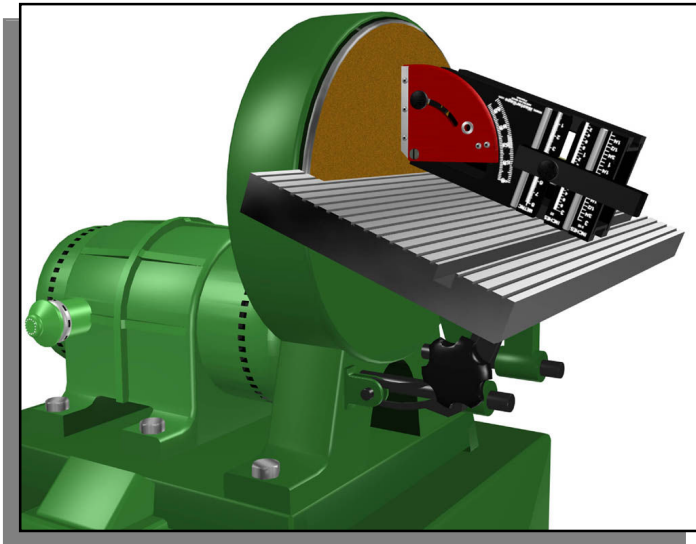


Set any angle required accurately.

TIP: Use the Protractor  
"INSTANT RECALL" feature

Checking and adjusting the  
sanding disk face plate  
parallel to the miter slot.

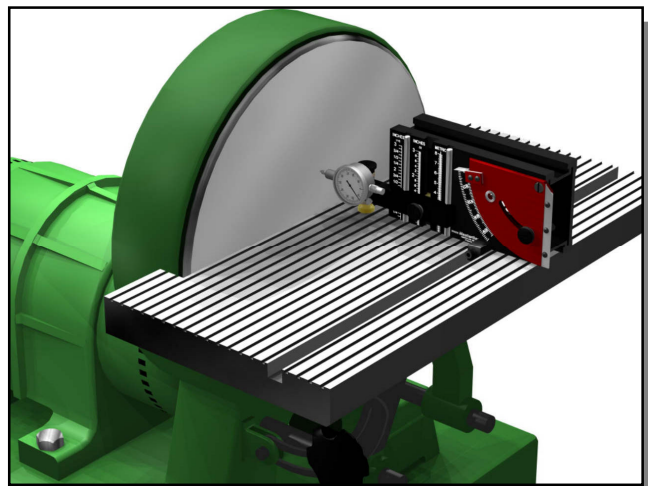

## DRUM SANDER

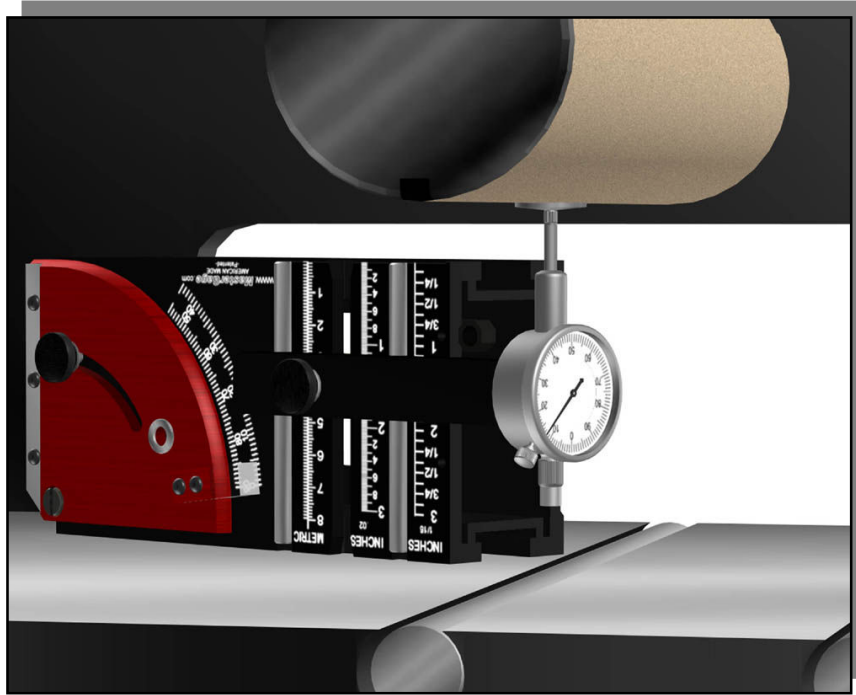

Check and set roller[s] parallel to base table top.

Also check and set bottom feed rollers for parallelism and required height

Use a ½ inch diameter [or larger] flat dial indicator tip